

# PD663 Explosion-Proof Loop-Powered Meter

## Instruction Manual



**ProtEX™**  
Lite



- Fully-Approved Explosion-Proof Loop-Powered Meters
- 4-20 mA Input with  $\pm 0.05\%$  Accuracy of Calibrated Span
- 1.7 Volt Drop (4.7 Volt Drop with Backlight)
- Easy Field Scaling in Engineering Units without a Calibrator
- 0.6" (15.2 mm)  $3\frac{1}{2}$ + Digits LCD Display; -1999 to 2999
- Display Mountable at 0°, 90°, 180°, & 270°
- HART® Protocol Transparent
- Loop-Powered Backlight
- Operating Temperature Range: -40 to 75°C (-40 to 167°F)
- Installation Temperature Range: -55 to 75°C (-67 to 167°F)
- Four Internal Buttons for Easy Field Scaling
- Max/Min Display
- Programmable Noise Filter
- 32-Point Linearization & Square Root Extraction
- Conformal Coated PCBs for Dust & Humidity Protection
- UL Listed as Explosion-Proof / Dust Ignition-Proof / Flame-Proof
- CSA Certified as Explosion-Proof / Dust Ignition-Proof / Flame-Proof
- ATEX and IECEx Certified as Explosion-Proof
- Built-In Flange for Wall or Pipe Mounting
- Explosion-Proof, IP68, NEMA 4X Die-Cast Aluminum & Stainless Steel Enclosures
- Two 1/2" NPT or M20 Conduit Openings
- 1.5" U-Bolt Kit & 2" Pipe Mounting Kit Available
- Stainless Steel Tag Available
- 3-Year Warranty

## PRECISION DIGITAL CORPORATION

233 South Street • Hopkinton MA 01748 USA  
Tel (800) 343-1001 • (508) 655-7300

[www.predig.com](http://www.predig.com)

**PRECISION  
DIGITAL** 

## Disclaimer

The information contained in this document is subject to change without notice. Precision Digital Corporation makes no representations or warranties with respect to the contents hereof; and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose.

### CAUTION

- Read complete instructions prior to installation and operation of the meter.

### WARNINGS

- Risk of electric shock or personal injury.
- This product is not recommended for life support applications or applications where malfunctioning could result in personal injury or property loss. Anyone using this product for such applications does so at his/her own risk. Precision Digital Corporation shall not be held liable for damages resulting from such improper use.
- Failure to follow installation guidelines could result in death or serious injury. Make sure only qualified personnel perform the installation.
- Never remove the meter cover in explosive environments when the circuit is live.
- Cover must be fully engaged to meet Flame-Proof / Explosion-Proof requirements.

### WARNING

Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

## Limited Warranty

Precision Digital Corporation warrants this product against defects in material or workmanship for the specified period under "Specifications" from the date of shipment from the factory. Precision Digital's liability under this limited warranty shall not exceed the purchase value, repair, or replacement of the defective unit. See Warranty Information and Terms & Conditions on [www.prediq.com](http://www.prediq.com) for complete details.

© 2024 Precision Digital Corporation.  
All rights reserved.

## Introduction

The PD663 is an explosion-proof loop-powered field meter that is available in an aluminum or stainless steel enclosure.

The ProtEX-Lite carries all major approvals including:

- UL Listed as Explosion-Proof / Dust Ignition-Proof / Flame-Proof
- CSA Certified as Explosion-Proof / Dust Ignition-Proof / Flame-Proof
- ATEX and IECEx Certified as Explosion-Proof

The PD663 is easy to install and program and it can be seen in a variety of lighting conditions, even in bright sunlight. It will operate down to -40°C and is approved for installation in areas where the temperature gets as cold as -55°C, however the display will cease functioning.

The fact that this meter is loop-powered means that there is no need to run additional, costly power lines into a hazardous area. The meter gets all the power it needs from the 4-20 mA loop and its 1.7 V drop results in a minimal burden on the loop. Loop-powered backlighting is a standard feature that allows the meter to be read in dimly lit areas. The backlight can be enabled or disabled via alternative wiring of the terminal block.

The meter features a wide -40 to 75°C operating temperature range and is available with two 1/2" NPT or M20 threaded conduit openings and a built-in flange for wall or pipe mounting. Calibration is a quick process involving the four internal pushbuttons. The 3½+ digits display on the ProtEX-Lite will read up to 2999.

## Ordering Information

Model	Description
<a href="#">PD663-0K0-00</a>	Explosion-Proof Aluminum Loop-Powered Process Meter with Backlight and Two 1/2" Conduit Openings
<a href="#">PD663-0K0-00-M20</a>	Explosion-Proof Aluminum Loop-Powered Process Meter with Backlight and Two M20 Conduit Openings
<a href="#">PD663-0K0-SS</a>	Explosion-Proof Stainless Steel Loop-Powered Process Meter with Backlight and Two 1/2" Conduit Openings
<a href="#">PD663-0K0-SS-M20</a>	Explosion-Proof Stainless Steel Loop-Powered Process Meter with Backlight and Two M20 Conduit Openings

## Accessories

Model	Description
<a href="#">PDAPLUG50</a>	1/2" NPT 316 Stainless Steel Conduit Plug with Approvals
<a href="#">PDAPLUGM20</a>	M20 316 Stainless Steel Conduit Plug with Approval
<a href="#">PDAADAPTER-50M-75F</a>	M-1/2" NPT to F-3/4" NPT Adapter with Approvals
<a href="#">PDAADAPTER-50M-M20F</a>	M-1/2" NPT to F-M20 Adapter with Approvals
<a href="#">PD9501</a>	Multi-Function Calibrator
<a href="#">PD9502</a>	Low-Cost Signal Generator
<a href="#">PDA1001</a>	USB Power Bank
<a href="#">PDA6631-SS</a>	Stainless Steel 1.5" U-Bolt Kit. All Material: Stainless Steel; (1) U-Bolt for 1.5" Pipe with (2 each) Washers, Lock Washers, and Nuts.
<a href="#">PDA6863-SS</a>	Stainless Steel 2" Pipe Mounting Kit. All Material: Stainless Steel; (1) Plate with (2 each) Bolts, Washers, Lock Washers & Nuts to Mount Meter. (1) U-Bolt for 2" Pipe with (2 each) Washers, Lock Washers & Nuts.
<a href="#">PDA-SSTAG</a>	Custom Stainless Steel Tag (see website for convenient ordering form)

**Note:** Unless otherwise specified, the above accessories do not carry hazardous area approvals and are thus not suitable for location in hazardous areas.

## Table of Contents

Introduction.....	2
Ordering Information.....	3
Physical Features .....	6
Great for Cold Temperatures .....	6
Electronics Module .....	6
Easy Pipe Mounting .....	7
Rotatable Display Module.....	7
Tamper-Proof Capability.....	7
Stainless Steel Tag Attaching Loop .....	7
Accessories .....	8
Useful Tools .....	8
Specifications .....	9
General.....	9
Input .....	9
Enclosure.....	9
General Compliance Information.....	10
Electromagnetic Compatibility.....	10
Product Ratings and Approvals.....	10
EU Declaration of Conformity.....	10
Safety Information .....	11
Installation.....	11
Unpacking.....	12
Cover Jam Screw .....	12
Mounting .....	12
Dimensions .....	13
Connections.....	13
Wiring Diagrams.....	14
Setup and Programming.....	15
Overview .....	15
Buttons and Display.....	15
Setting Numeric Values .....	15
Programming the Meter .....	15
Main Menu.....	15
Main Menu Display Functions & Messages .....	16
Setting the Decimal Point ( $d^P$ ) .....	16
Scaling the Meter ( $S\%L$ ).....	16
Calibrating the Meter ( $\%RL$ ) .....	17
Re-calibrating the Internal Calibration Reference ( $i\%RL$ ) .....	17
Advanced Features Menu.....	17
Advanced Features Menu & Display Messages.....	17
Signal Input Conditioning Function ( $Fnc$ ) .....	18
Information Menu ( $INF\alpha$ ).....	18
Input Signal Filter ( $F\%L$ ).....	18
Internal Calibration ( $i\%RL$ ).....	18
Operation.....	19
Front Panel Buttons Operation .....	19
Maximum & Minimum Readings ( $H\%I$ & $L\%D$ ).....	19
Reset Meter to Factory Defaults.....	20
Factory Defaults & User Settings.....	20
Troubleshooting .....	21
Troubleshooting Tips.....	21
Quick User Interface Reference .....	21

## Table of Figures

Figure 1. Enclosure Dimensions – Front View.....	13
Figure 2. Enclosure Dimensions – Side View .....	13
Figure 3. Enclosure Dimensions – Top View .....	13
Figure 4. PD663 Meter Assembly, Rear View .....	13
Figure 5. PD663 Input Connections without Backlight .....	14
Figure 6. PD663 Input Connections with Backlight .....	14

## Physical Features



The ProtEX-Lite PD663-0K0-00 comes with two 1/2" NPT conduit openings and the PD663-0K0-00-M20 comes with two M20 conduit openings.

## Great for Cold Temperatures

The ProtEX-Lite PD663 will operate over a temperature range of -40 to 75°C (-40 to 167°F). Below -40°C, the display will cease functioning, however, the instrument is approved to be installed in locations where the temperature goes down to -55°C.



## Electronics Module

The PD663 electronics module is housed in a plastic enclosure that provides a degree of environmental protection for the electronics circuitry. The module is mounted to the enclosure with spring-loaded thumbscrews and can be oriented in 0°, 90°, 180°, or 270° increments. Connections are made to a removable screw terminal block.





### Easy Pipe Mounting

The ProtEX-Lite comes with a built-in mounting flange. This allows for easy mounting to walls or pipes using the [PDA6631-SS](#) Stainless Steel U-Bolt Kit for a 1.5" pipe or the [PDA6863-SS](#) Stainless Steel Pipe Mounting Kit for a 2" pipe. A slot on the back of the enclosure makes it easy to center the unit on a pipe.



PDA6631-SS 1.5" U-Bolt Kit



PDA6863-SS 2" Pipe Mounting Kit

### Rotatable Display Module

The display module can be rotated in 90° increments providing added mounting flexibility. Plus the various conduit connections allow a variety of installation options.



### Tamper-Proof Capability

The instrument can be made tamper-proof by inserting a wire through the built-in loop on the base of the enclosure and a hole in the lid of the enclosure and securing this wire with a lead seal.



### Stainless Steel Tag Attaching Loop

The enclosure is equipped with a loop at the top to easily attach a [PDA-SSTAG](#) stainless steel tag.



## Accessories

### PDA6631-SS 1.5" U-Bolt Kit



The [PDA6631-SS](#) U-Bolt Kit provides a convenient way to mount the PD663 to a 1.5" pipe.

### PDA6863-SS 2" Pipe Mounting Kit




The [PDA6863-SS](#) Pipe Mounting Kit provides a convenient way to mount the PD663 to a 2" pipe.

### PDA-SSTAG Stainless Steel Tag



The [PDA-SSTAG](#) is a laser etched stainless steel tag that can be customized with three lines of text. Each tag comes with a stainless steel wire and lead seal for easy mounting wherever you need.

## Dimensions

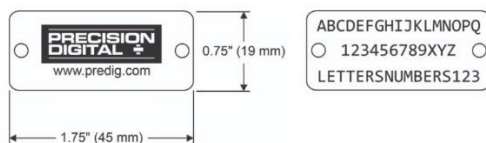

## Useful Tools

### PD9501 Multi-Function Calibrator



This [PD9501](#) Multi-Function Calibrator has a variety of signal measurement and output functions, including voltage, current, thermocouple, and RTD.

### PD9502 Low-Cost Signal Generator



The [PD9502](#) is a low-cost, compact, simple to use 4-20 mA or 0-10 VDC signal generator. It can easily be set for 0-20 mA, 4-20 mA, 0-10 V or 2-10 V ranges. Signal adjustment is made with a one-turn knob. A 15-27 VDC wall plug is provided with the instrument. Optional USB power bank is available.



## Specifications

Except where noted all specifications apply to operation at +25°C.

### General

<b>Display</b>	0.6" (15.2 mm) LCD, 3½+ digits; -1999 to 2999
<b>Loop-Powered Backlight</b>	Powered directly from the 4-20 mA loop, no batteries required. Backlight can be enabled or disabled via alternative wiring of terminal block. The display brightness will increase as the input signal current increases.
<b>Display Update Rate</b>	2 updates/second
<b>Display Orientation</b>	Display may be mounted at 90° increments up to 270° from default orientation.
<b>Overrange</b>	Display flashes <b>2999</b>
<b>Underrange</b>	Display flashes <b>-1999</b>
<b>Programming Method</b>	4 Internal pushbuttons (behind glass)
<b>Noise Filter</b>	Programmable <b>H I, L0, or 0FF</b>
<b>Recalibration</b>	Recalibration is recommended at least every 12 months.
<b>Max/Min Display</b>	Max/Min readings reached by the process are stored until reset by the user or until power to the meter is turned off.
<b>Non-Volatile Memory</b>	All programmed settings are stored in non-volatile memory for a minimum of ten years if power is lost.
<b>Normal Mode Rejection</b>	64 dB at 50/60 Hz
<b>Environmental</b>	Operating temperature range: -40 to 75°C (-40 to 167°F) Storage temperature range: -55 to 75°C (-67 to 167°F) Installation temperature range: -55 to 75°C (-67 to 167°F) (The display ceases to function below -40°C) Relative humidity: 0 to 90% non-condensing Printed circuit boards are conformally coated
<b>Connections</b>	Removable screw terminals accept 12 to 22 AWG wire
<b>Mounting</b>	May be mounted directly to conduit. Two mounting holes for 1.5" pipe or wall mounting. See <i>Dimensions</i> on page 13.
<b>Tightening Torque</b>	Screw terminal electrical connectors: 4.5 lb-in (0.5 Nm)
<b>Overall Dimensions</b>	4.30" x 4.27" x 3.66" (109 mm x 108 mm x 93 mm) (W x H x D)
<b>Weight</b>	AL: 2.45 lbs (40 oz, 1.13 kg) SS: 5.00 lbs (80 oz, 2.3 kg)
<b>Warranty</b>	3 years parts and labor. See Warranty Information and Terms & Conditions on <a href="http://www.prediq.com">www.prediq.com</a> for complete details.

### Input

<b>Input</b>	4-20 mA	
<b>Accuracy</b>	±0.05% of calibrated span ±1 count	
<b>Function</b>	Linear (2 to 32 points) or square root	
<b>Temperature Drift</b>	50 PPM/°C from -40 to 75°C ambient	
<b>Decimal Point</b>	User selectable decimal point	
<b>Minimum Span</b>	Input 1 & Input 2: 0.40 mA	
<b>Calibration Range</b>	An <i>Error</i> message will appear if input 1 and input 2 signals are too close together.	
	<b>Input Range</b>	<b>Minimum Span Input 1 &amp; Input 2</b>
	4-20 mA	0.40 mA
<b>Maximum Voltage Drop &amp; Equivalent Resistance</b>	<b>Without Backlight</b>	<b>With Backlight</b>
	1.7 VDC @ 20 mA	4.7 VDC @ 20 mA
	85 Ω @ 20 mA	235 Ω @ 20 mA
<b>Input Overload</b>	Over current protection to 2 A max.	
<b>HART Transparency</b>	The meter does not interfere with existing HART communications; it displays the 4-20 mA primary variable and it allows the HART communications to pass through without interruption. The meter is not affected if a HART communicator is connected to the loop. The meter does not display secondary HART variables.	

### Enclosure

<b>Material</b>	AL Models: ASTM A413 LM6 die-cast aluminum, copper-free, enamel coated SS Models: ASTM A743 CF8M investment-cast 316 stainless steel
<b>Gasket</b>	Fluoroelastomer
<b>Rating</b>	NEMA 4X, IP68 Explosion-Proof
<b>Color</b>	AL: Blue SS: Silver
<b>Window</b>	Borosilicate glass
<b>Conduits</b>	PD663-0K0-00: Two 1/2" NPT PD663-0K0-00-M20: Two M20 PD663-0K0-SS: Two 1/2" NPT PD663-0K0-SS-M20: Two M20
<b>Flange</b>	Built-in flange for wall and pipe mounting
<b>Tamper-Proof Seal</b>	Cover may be secured with tamper-proof seal
<b>Instrument Tag Loop</b>	Built-in loop for securing stainless steel tag loop

## General Compliance Information

### Electromagnetic Compatibility

<b>EMC Emissions</b>	<ul style="list-style-type: none"> <li>• CFR 47 FCC Part 15 Subpart B Class A emissions requirements (USA)</li> <li>• ICES-003 Information Technology emissions requirements (Canada)</li> <li>• AS/NZS CISPR 11 Group 1 Class A ISM emissions requirements (Australia/New Zealand)</li> <li>• EN 55011 Group 1 Class A ISM emissions requirements (EU)</li> <li>• EN 61000-6-4 Emissions requirements for Heavy Industrial Environments - Generic</li> </ul>
<b>EMC Emissions and Immunity</b>	EN 61326-1 EMC requirements for Electrical equipment for measurement, control, and laboratory use – industrial use

### Product Ratings and Approvals

<b>UL</b>	Explosion-Proof for use in: For Class I, Division 1, Groups B, C, D Class II, Division 1, Groups E, F, G Class III, Division 1; T6 Class I, Zone 1, AEx db IIC T6 Gb Zone 21, AEx tb IIIC T85°C Db Tamb = -55°C to 75°C UL Type 4X, IP66 / IP68 UL File Number: E494837
<b>CSA</b>	Explosion-Proof for use in: Class I, Division 1, Groups B, C and D Dust Ignition-Proof for use in: Class II/III, Division 1, Groups E, F and G; T6 Flame-Proof for use in: Zone 1, Ex d IIC T6 Ta = -55 to 75°C Enclosure: Type 4X & IP66/IP68 Certificate Number: CSA 11 2325749
<b>ATEX</b>	Explosion-Proof for use in: Ⓢ II 2 G D Ex db IIC T6 Gb Ex tb IIIC T85°C Db IP68 Ta = -55 to 75°C Certificate Number: Sira 10ATEX1116X
<b>IECEX</b>	Explosion-Proof for use in: Ex db IIC T6 Gb Ex tb IIIC T85°C Db IP68 Ta = -55 to 75°C Certificate Number: IECEX SIR 10.0056X

### ATEX/IECEX Specific Conditions of Use

1. The equipment label and epoxy coating may generate an ignition-capable level of electrostatic charges under certain extreme conditions. The user should ensure that the equipment is not installed in a location where it may be subjected to external conditions (such as high-pressure steam) which might cause a buildup of electrostatic charges on non-conducting surfaces. Additionally, cleaning of the equipment should be done only with a damp cloth.
2. Flameproof joints are not intended to be repaired.
3. All entry closure devices shall be suitably certified as “Ex d”, “Ex t” and “IP66/68” as applicable. Suitable thread sealing compound (non-setting, non-insulating, non-corrosive, not solvent based, suitable for the ambient rating) must be used at the NPT conduit entries to achieve the IPx8 rating while maintaining the Ex protection concept.

### Year of Construction

This information is contained within the serial number with the first four digits representing the year and month in the YYMM format.

### For European Community:

The PD663 must be installed in accordance with the ATEX directive 2014/34/EU, the product certificate Sira 10ATEX1116X, and the product manual.

### UL Specific Conditions of Safe Use

- Flameproof joints are not intended to be repaired.
- “WARNING - Potential Electrostatic Charging Hazard – See Instructions.” Anodized or epoxy coated aluminum models must not be installed in locations where they may be subjected to conditions (such as high-pressure steam) which might cause a build-up of electrostatic charges on non-conductive surfaces. Additionally, cleaning of the equipment should only be done with a damp cloth.
- The equipment has not been evaluated for sealing of process fluids. The final installation shall include suitable sealing of the process fluids.
- The process temperature range shall not exceed the ambient temperature range of the equipment, if attached.

## EU Declaration of Conformity

For shipments to the EU and UK, a Declaration of Conformity was printed and included with the product. For reference, a Declaration of Conformity is also available on our website [www.prediq.com/docs](http://www.prediq.com/docs).

## Safety Information

### CAUTION

- Read complete instructions prior to installation and operation of the annunciator.

### WARNINGS

- Risk of electric shock or personal injury.
  - Hazardous voltages exist within enclosure.
  - Do not open when an explosive atmosphere is present.
  - To reduce the risk of ignition of hazardous atmospheres, disconnect the equipment from the supply circuit before opening.
  - Keep assembly tightly closed when in operation.
  - Install conduit seals within 18 inches (450 mm) of the enclosure - For Zone applications, seal shall appear immediately adjacent to the enclosure entrance or an explosion proof conduit seal may be applied per the Division requirements as detailed in this WARNING statement.
  - Potential electrostatic charging hazard – see instructions.
  - Installation and service should be performed only by trained service personnel.
  - If this equipment is used in a manner not specified by Precision Digital, the protection provided by the equipment may be impaired.
  - Substitution of components may impair hazardous location safety.
  - Service requiring replacement of internal components must be performed at the factory.
  - The internal grounding terminal shall be used for the equipment grounding connection and that the external terminal is for a supplementary bonding connection where local codes or authorities permit or require such connection.
  - In hazardous areas, conduit and conduit/stopping plugs require the application of non-setting (solvent free) thread sealant. It is critical that all relevant hazardous area guidelines be followed for the installation or replacement of conduit or plugs.
-

## Installation

**For Installation in USA:** The PD663 must be installed in accordance with the National Electrical Code (NEC) NFPA 70.

**For Installation in Canada:** The PD663 must be installed in accordance with the Canadian Electrical Code CSA 22.1. All input circuits must be derived from a CSA approved Class 2 source.

**For European Community:** The PD663 must be installed in accordance with the ATEX directive 2014/34/EU and the product certificate Sira 10ATEX1116X.

### **⚠ WARNING**

- Disconnect from supply before opening enclosure.
- Keep cover tight while circuits are live.
- The equipment shall only be connected to a Class 2 power supply.
- All conduit openings must be fitted with suitably certified and dimensioned cable entry devices or stopping plugs.
- Install conduit seals within 18 in. (450 mm) of enclosure.
- Cable must be suitable for 90°C.

All pushbuttons and wiring connectors are accessed by opening the enclosure. To access electrical connectors, remove the 2 captive screws and remove the meter assembly.

## Unpacking

Remove the meter from box. Inspect the packaging and contents for damage. Report damages, if any, to the carrier.

If any part is missing or the meter malfunctions, please contact your supplier or the factory for assistance.

## Cover Jam Screw



The cover jam screw should be properly installed once the meter has been wired and tested in a safe environment. The cover jam screw is intended to prevent the removal of the meter cover in a hazardous environment without the use of tools. Using a M2 hex wrench, turn the screw clockwise until the screw contacts the meter. Turn the screw an additional 1/4 to 1/2 turn to secure the cover.

### **⚠ CAUTION**

- Excess torque may damage the threads, screw head, or wrench.

## Mounting

The PD663 has two mounting holes that may be used for 1.5" pipe mounting or wall mounting. Alternatively, the unit may be supported by the conduit using the conduit holes provided.

The PD663 can be mounted to a 2" pipe by using the PDA6863-SS pipe mounting kit or to a 1.5" pipe using the PDA6631-SS U-bolt kit.

Refer to *Dimensions* for details on wall or panel space requirements.

### **⚠ WARNING**

- Do not attempt to loosen or remove flange bolts while the meter is in service.

### Dimensions

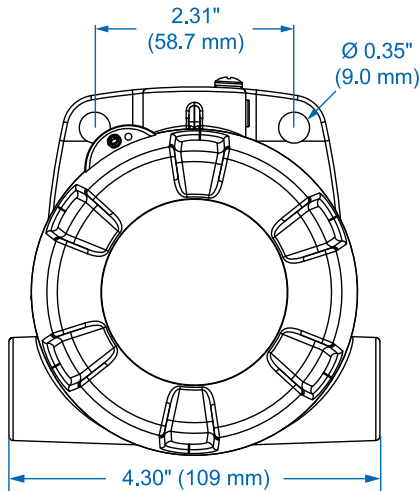


Figure 1. Enclosure Dimensions – Front View

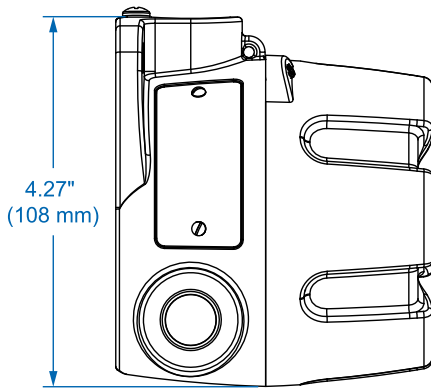


Figure 2. Enclosure Dimensions – Side View

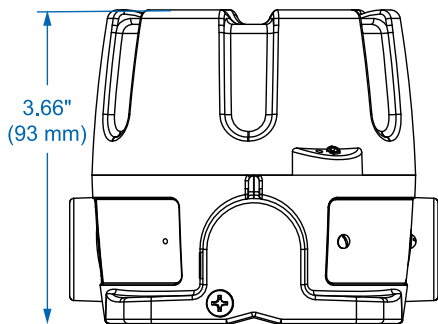


Figure 3. Enclosure Dimensions – Top View

### Connections

To access the connectors, remove the enclosure cover and unscrew the two captive stainless steel screws. Remove the meter assembly from the enclosure. Signal connections are made to a three-terminal removable connector on the back of the meter assembly. Grounding connections are made to the two ground screws provided on the base – one internal and one external.

<b>S+</b>	4-20 mA signal input positive terminal connection
<b>S-</b>	4-20 mA signal return/negative terminal connection
<b>B-</b>	4-20 mA signal return/negative terminal when using the installed loop powered backlight option

See *Figure 4* for terminal positions on the rear of the meter assembly.

#### ⚠ WARNINGS

- Observe all safety regulations. Electrical wiring should be performed in accordance with all agency requirements and applicable national, state, and local codes to prevent damage to the meter and ensure personnel safety.
- Static electricity can damage sensitive components.
- Observe safe handling precautions for static-sensitive components.
- Use proper grounding procedures/codes.
- If the meter is installed in a high voltage environment and a fault or installation error occurs, high voltage may be present on any lead or terminal.

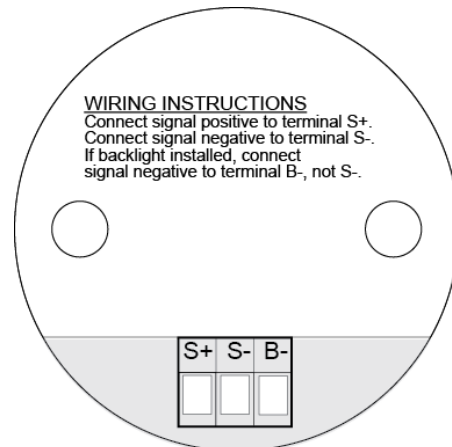


Figure 4. PD663 Meter Assembly, Rear View


 Download free 3-D CAD files of these instruments to simplify your drawings!  
[predig.com/documentation-cad](http://predig.com/documentation-cad)

## Wiring Diagrams

Signal input connections are made to a three-terminal connector labeled S+|S-|B-. The enclosure also provides one internal and one external earth grounding screw.

The 4-20 mA input with no backlight has a maximum voltage drop of 1.7 V and is wired as shown in *Figure 5*.

The loop-powered backlight configuration requires a total maximum voltage drop of 4.7 V. The backlight is recommended for dim lighting conditions and is enabled when wired as shown in *Figure 6*.

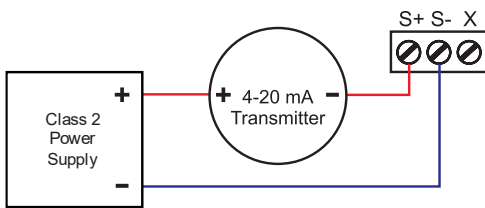


Figure 5. PD663 Input Connections without Backlight

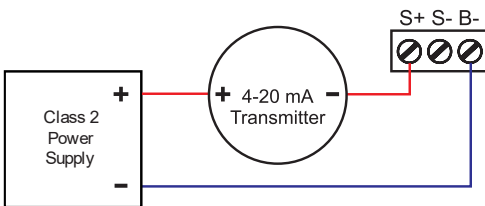


Figure 6. PD663 Input Connections with Backlight



## Setup and Programming

There is **no need to recalibrate** the meter for milliamps when first received from the factory.  
 The meter is **factory calibrated** for milliamps prior to shipment. The calibration equipment is traceable to NIST standards.

### Overview

There are no jumpers involved in the setup process of the meter.





Setup and programming is done through the front panel buttons.

After all connections have been completed and verified, apply power to the loop.

For *Quick User Interface Reference* go to page 21.

### Buttons and Display



Button/ Symbol	Description
 MENU	Menu button to enter programming mode. Press and hold for 5 seconds to access the <i>Advanced</i> features of the meter.
 ENTER	Enter button to access a menu or accept a setting.
 RESET	Right arrow to scroll through the menus or move to the next digit or decimal position during programming. Resets the Max or Min display value when pressed while showing Max or Min value.
 MAX	Up arrow to scroll through the menus, decimal point, or to increment the value of a digit. Displays the Max then Min display values when pressed during normal run mode.

### Setting Numeric Values

The numeric values are set using the **Right** and **Up** arrow buttons. Press the **Right** arrow to select next digit and the **Up** arrow to increment digit. The two left-most digits on the display are set as a single digit, able to display -19 to 29.

The digit being changed blinks.

Press the **Enter** button, at any time, to accept a setting or **Menu** button to exit without saving changes.

The decimal point is set using the **Right** or **Up** arrow button in the *Setup-decimal point* menu.

### Programming the Meter


The meter may either be scaled (SCL) without applying an input or calibrated (CAL) by applying an input. The meter comes factory calibrated to NIST standards, so for initial setup, it is recommended to use the (SCL) function. The Program menu contains the Scale (SCL) and the Calibrate (CAL) menus. Process inputs may be scaled or calibrated to any display within the range of the meter.

Additional parameters, not needed for most applications, are viewed and programmed with the *Advanced Features Menu*, see page 17.

### Main Menu

The main menu consists of the most commonly used functions: *Decimal Point Location*, *Scale*, and *Calibration*.

Press **Menu** button to enter Programming Mode then press the **Up Arrow** button to scroll through the main menu.

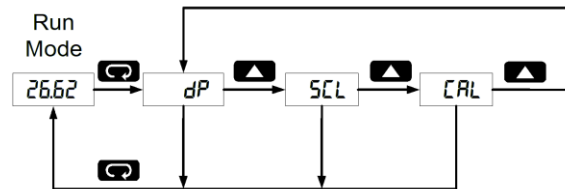

Press **Menu**, at any time, to exit and return to Run Mode. Changes made to settings prior to pressing **Enter** are not saved.

Changes to the settings are saved to memory only after pressing **Enter**.

The display moves to the next menu every time a setting is accepted by pressing **Enter**.

### Main Menu Display Functions & Messages


The meter displays various functions and messages during setup, programming, and operation. The following table shows the main menu functions and messages in the order they appear in the menu.

Display	Parameter	Action/Setting
dP	Decimal point	Set decimal point
5CL	Scale	Enter the <i>Scale</i> menu
nPt	Number of Points	Set number of linearization points
i 1	Scale Input 1	Input signal 1 value (mA)
d 1	Scale Display 1	Scaled value for input 1
i 2	Scale Input 2	Input signal 2 value (mA)
d 2	Scale Display 2	Scaled value for input 2
CL	Calibrate	Enter the <i>Calibrate</i> menu
nPt	Number of Points	Set number of linearization points
i 1	Calibrate Input 1	Read input signal 1
d 1	Calibrate Display 1	Enter value for input 1
i 2	Calibrate Input 2	Read input signal 2
d 2	Calibrate Display 2	Enter value for input 2

### Setting the Decimal Point (dP)

Decimal point may be set with up to three decimal places or with no decimal point at all.

Pressing the **Right** or **Up** arrow moves the decimal point one place to the right until no decimal point is displayed, then it moves to the left most position.

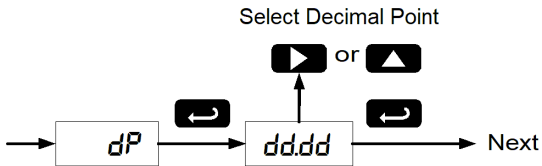

### Scaling the Meter (5CL)


#### IMPORTANT

- The input to the meter must be at least 6 mA prior to pressing the Enter button at the completion of programming for programming parameters to be saved.

The 4-20 mA input can be scaled to display the process in engineering units.

A signal source is not needed to scale the meter; simply program the inputs and corresponding display values.

If using linear signal input conditioning, enter the number of scale points (2-32), followed by the input values and display values. If using square root signal input conditioning, the number of points input menu will not be present.

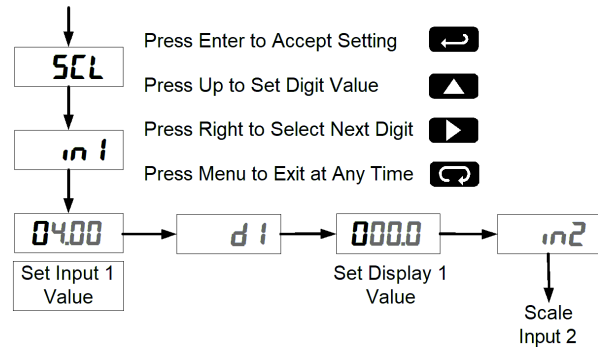

### Number of Points (nPt)

Set the number of linearization points used in the *Scale* menu. 2 to 32 points may be used. The *Scale* menu is entered after entering the number of points.

For instructions on how to program numeric values see *Setting Numeric Values*, page 15.

### Minimum Input Span

The minimum input span is the minimum difference between input 1 and input 2 signals required to complete the calibration or scaling of the meter. The minimum span is 0.40 mA.

If the minimum span is not maintained, the meter reverts to input 2, allowing the appropriate input signals to be applied.


### Calibrating the Meter (CAL)

To scale the meter without a signal source refer to *Scaling the Meter (5CL)*, page 16.

**IMPORTANT**

- The input to the meter must be at least 6 mA prior to pressing the Enter button at the completion of programming for programming parameters to be saved.

The meter can be calibrated to display the process in engineering units by applying the appropriate input signal and following the calibration procedure. The use of a calibrated signal source is strongly recommended.

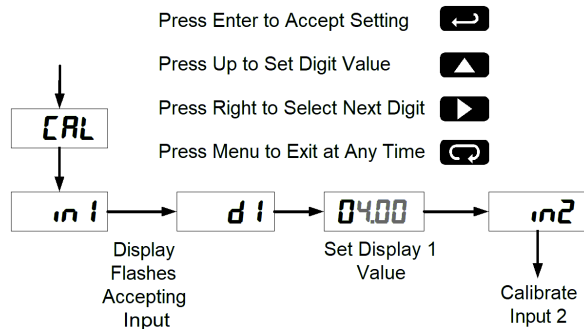

Press the **Up** arrow button to scroll to the *Calibration* menu (CAL) and press **Enter**.  
 If using linear signal input conditioning, enter the number of calibration points (2-32).  
 The meter displays *in 1*. Apply a known signal and press **Enter**. The display will flash while accepting the signal.  
 When the meter displays *d 1*, press **Enter**. Enter a corresponding display value for the signal input, and press **Enter** to accept.  
 The meter displays *in 2*. Apply a known signal and press **Enter**. The display will flash while accepting the signal.  
 When the meter displays *d 2*, press **Enter**. Enter a corresponding display value for the signal input, and press **Enter** to accept.

### Re-calibrating the Internal Calibration Reference (ICAL)

The *Internal Calibration (ICAL)* menu, located in the *Advanced* features menu, is used to recalibrate the internal calibration reference. Recalibration is recommended at least every twelve months. Refer to *Internal Calibration (ICAL)*, page 18 for instructions.

### Advanced Features Menu

To simplify the setup process, functions not needed for most applications are located in the *Advanced* features menu. Press and hold the **Menu** button for five seconds to access the *Advanced* features menu.



### Advanced Features Menu & Display Messages

The following table shows the *Advanced* features menu functions and messages in the order they appear in the menu.

Display	Parameter	Action/Setting
<i>Fnc</i>	<i>Input Function</i>	Set linear or square root input conditioning function
<i>Lnr</i>	<i>Linear</i>	Set linear scaling
<i>Sqr</i>	<i>Square Root</i>	Set square root input conditioning function
<i>inFo</i>	<i>Information</i>	Enter the <i>Information</i> menu
<i>Sft</i>	<i>Software Information</i>	Software release number
<i>vEr</i>	<i>Version</i>	Meter firmware version
<i>C</i>	<i>Calibration Temp (°C)</i>	Temperature at time of I-calibration (°C)
<i>F</i>	<i>Calibration Temp (°F)</i>	Temperature at time of I-calibration (°F)
<i>F iL</i>	<i>Filter</i>	Set filter function level
<i>iCAL</i>	<i>I-Calibration</i>	Internal master factory calibration
<i>rSt</i>	<i>Reset Defaults</i>	Restore factory default parameter settings

## Signal Input Conditioning Function (Fnc)

The PD663 provides linear and square root signal input conditioning functions for inputs from linear and non-linear transmitters.

### Linear (Lnr)

Meters are set up at the factory for linear function using two-point linearization. Multi-point linearization with up to 32 points may be used. The linear function provides a display that is linear with respect to the input signal between each set of input points.

### Square Root (Sqr)

The square root function is used to linearize the signal from a differential pressure transmitter and display flow rate in engineering units.

## Information Menu (Inf)

The *Information* menu is located in the *Advanced* features menu, to access *Advanced Features Menu* see, page 17.

It shows software identification number, version number, and calibration temperatures. To determine the software version of a meter:

Go to the *Information* menu (Inf) and press **Enter** button.

The meter will automatically scroll through the software release number and software version. The meter temperatures at the time of last internal calibration in °C and °F are displayed for calibration troubleshooting. Pressing the **Enter**, **Right**, or **Up** buttons will progress the information display.

Following the information display, the meter will exit the *Advanced* features menu and return to run mode.

## Input Signal Filter (FIL)

The noise filter is available for unusually noisy signals that cause an unstable process variable display. The noise filter averages the input signal over a certain period. The filter level can be set to low (L), high (H), or off (OFF). The higher the filter setting, the longer the averaging time and so the longer the display may take to find its final value.

The filter contains a noise filter bypass feature so that while small variations in the signal will be filtered out, large, abrupt changes to the input signal are displayed immediately.

## Internal Calibration (ICAL)

There is **no need to recalibrate** the meter for milliamps when first received from the factory. The meter is **factory calibrated** for milliamps prior to shipment. The calibration equipment is traceable to NIST standards.

The internal calibration allows the user to scale the meter without applying a signal. The use of a calibrated signal source is necessary to perform the internal calibration of the meter. Check calibration of the meter at least every 12 months.

### Notes:

The signal source must have a full-scale accuracy of 0.01% or better between 4 and 20 mA in order to maintain the specified accuracy of the meter.

Allow the meter to warm up for at least 15 minutes before performing the internal calibration procedure.

The *Internal calibration* menu is part of the *Advanced* features menu.

Press and hold the **Menu** button for 5 seconds to enter the *Advanced* features menu. Press the **Up** arrow button to scroll to the *Internal Calibration* menu (ICAL) and press **Enter**.

The meter displays 4.00 mA. Apply a 4.00 mA signal and press **Enter**. The display flashes for a moment while the meter is accepting the signal.





After the signal is accepted, the meter displays 20.00 mA. Apply a 20.00 mA signal and press **Enter**. The display flashes for a moment while the meter is accepting the signal.

## Error Message (Err)

An error message indicates that the calibration process was not successful. After the error message is displayed, the meter will revert to input 2 calibration settings. The error message might be caused by inadvertently leaving the signal at the previous level or not maintaining a 0.40 mA minimum span. Press the **Menu** button to cancel the current calibration process if necessary.


## Operation

### Front Panel Buttons Operation

Button Symbol	Description
 <b>MENU</b>	Press to enter or exit Programming Mode or exit Max/Min readings.
 <b>ENTER</b>	Press to indefinitely display Max or Min until Menu button is pressed.
 <b>RESET</b>	Press to reset Max or Min reading.
 <b>MAX</b>	Press to display Max/Min readings alternately.

### Maximum & Minimum Readings (HI & LO)

The maximum and minimum (peak & valley) readings reached by the process are stored in the meter since the last reset or power-up. The meter flashes HI or LO to differentiate between run mode and max/min display.

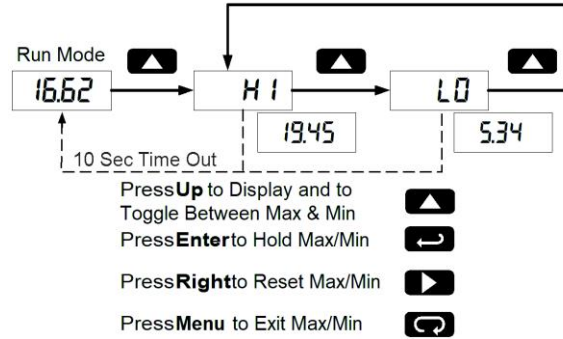

Press **Up** arrow button to display maximum reading since the last reset/power-up.

Press **Up** arrow again to display the minimum reading since the last reset/power-up.

Press **Enter** to continue to display the Max or Min display reading by disabling the Max/Min timeout. The meter will continue to track new Max/Min readings. Press **MENU** to exit the Max/Min reading.

If **Enter** is not pressed, the Max/Min display reading will continue to flash and time out after ten seconds. The meter will return to display the actual reading.

Press **Right** arrow button while in Max/Min Mode to reset both Max and Min. Max/Min display readings are reset to the current reading.

## Reset Meter to Factory Defaults

When the parameters have been changed in a way that is difficult to determine what's happening, it might be better to start the setup process from the factory defaults.

Instructions to load factory defaults:

Enter the *Advanced* features menu.

See *Advanced Features Menu*, page 17.

Press **Up** arrow button to display *inFd* menu.


Press **Right** arrow button when *inFd* is shown.

Press **Enter** button when *r5t* is shown.

Press **Enter** again when display flashes *r5t*.

Note: If **Enter** is not pressed a second time within three seconds, *r5t* will stop flashing and the last **Enter** press cancelled.

The meter goes through an initialization sequence (same as on power-up) and loads the factory default settings.

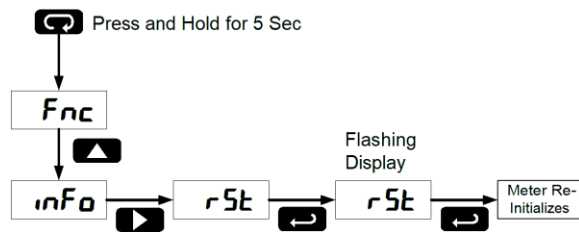

## Factory Defaults & User Settings

The following table shows the factory setting for most of the programmable parameters on the meter. Next to the factory setting, the user may record the new setting for the particular application.

Model: \_\_\_\_\_

S/N: \_\_\_\_\_

Date: \_\_\_\_\_

Parameter	Display	Default Setting	User Setting
Decimal point	ddd.dd	2 places	
Scale	5LL		
Number of Points	nPt	2	
Input 1	in 1	4.00 mA	
Display 1	d 1	4.00	
Input 2	in 2	20.00 mA	
Display 2	d 2	20.00	
<i>Advanced Features</i>			
Input Conditioning Function	FnC	Linear	
Filter	FIL	Off	




## Troubleshooting

The rugged design and the user-friendly interface of the meter should make it unusual for the installer or operator to refer to this section of the manual. If the meter is not working as expected, refer to the recommendations below.

### Troubleshooting Tips

Symptom	Check/Action
No display or faint display	Check input signal connections. Perform hard reset by shorting S+ and S- terminals.
Meter does not accept programming	The input to the meter must be at least 6 mA prior to pressing the Enter button at the completion of programming.
Rate display unsteady	Increase filter setting in <i>Advanced</i> menu.
Meter displays error message during calibration (err)	Check signal connections. Verify minimum input span requirements
Meter flashes 2999 or -1999	Check input signal within scaled range of 2999 and -1999.
Display stuck flashing a number and H I or L U	Press <b>Menu</b> to exit Max/Min display readings.
Display response is too slow	Check filter setting to see if it can be lowered to L U or UFF.
If the display locks up or the meter does not respond at all	Perform hard reset by shorting S+ and S- terminals.
Backlight does not appear	Verify backlight is installed. Check signal connections are as shown in <i>Figure 6. PD663 Input Connections with Backlight</i> on page 14.
Other symptoms not described above	Call Technical Support for assistance.

### Operational Modes

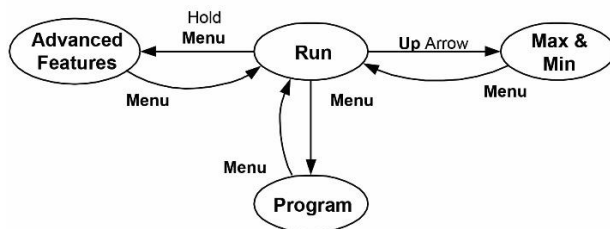


## Quick User Interface Reference

Pushbutton	Function
<b>MENU</b>	Go to Programming Mode, leave Programming Mode and Max/Min Mode. Hold for 5 seconds to enter <i>Advanced Features</i> menu directly.
<b>RIGHT Arrow</b>	Move to next digit or decimal point position. Reset Max/Min.
<b>UP Arrow</b>	Move to next selection or increment digit. Go to Max/Min Mode.
<b>ENTER</b>	Accept selection/value and move to next selection.

### MAX/MIN Mode


While in Run Mode, pressing **Up Arrow** will initiate MAX/MIN Mode. **Up Arrow** toggles between MAX & MIN displays, and **Right Arrow** resets the MAX/MIN to the current value. Press **Menu** or wait 10 seconds to return to Run Mode. Pressing **Enter/Ack** will disable the 10 second timeout and continuously display Max or Min.

### Main Menu

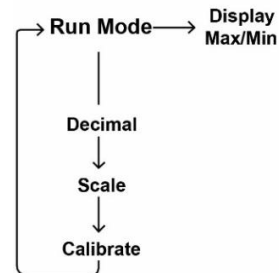

### Advanced Menu

Press & hold **Menu** for 5 seconds to access Advanced Features Menu

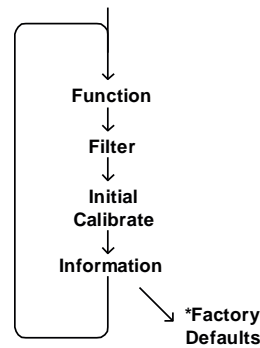

\*Access by pressing **Right** arrow twice

## Contact Precision Digital

### Technical Support

Call: (800) 610-5239 or (508) 655-7300

Email: [support@predig.com](mailto:support@predig.com)

### Sales Support

Call: (800) 343-1001 or (508) 655-7300

Email: [sales@predig.com](mailto:sales@predig.com)

### Place Orders

Email: [orders@predig.com](mailto:orders@predig.com)

For the latest version of this manual please visit

[www.predig.com](http://www.predig.com)

### PRECISION DIGITAL CORPORATION

233 South Street • Hopkinton MA 01748 USA

Tel (800) 343-1001 • (508) 655-7300

[www.predig.com](http://www.predig.com)

